



EARTH RESISTANCE TESTER

. Measurement range:

Earth resistance:10/100/1000Ω

Earth voltage:30V AC(5KΩ/V approx.)

. Accuracy

Earth resistance:Within±5% of full scale

Earth voltage: Within±5% of full scale

. Measurement system

Earth resistance by constant current inverter 800Hz approx.2mA

Earth voltage by rectifier type 5KΩ/V approx.40~500Hz

. Withstand voltage

1500V AC for one minute between electrical circuit and housing case